 



KG

22 kilogram




350 x 350 x 203 (mm)

AudioSense User Manual

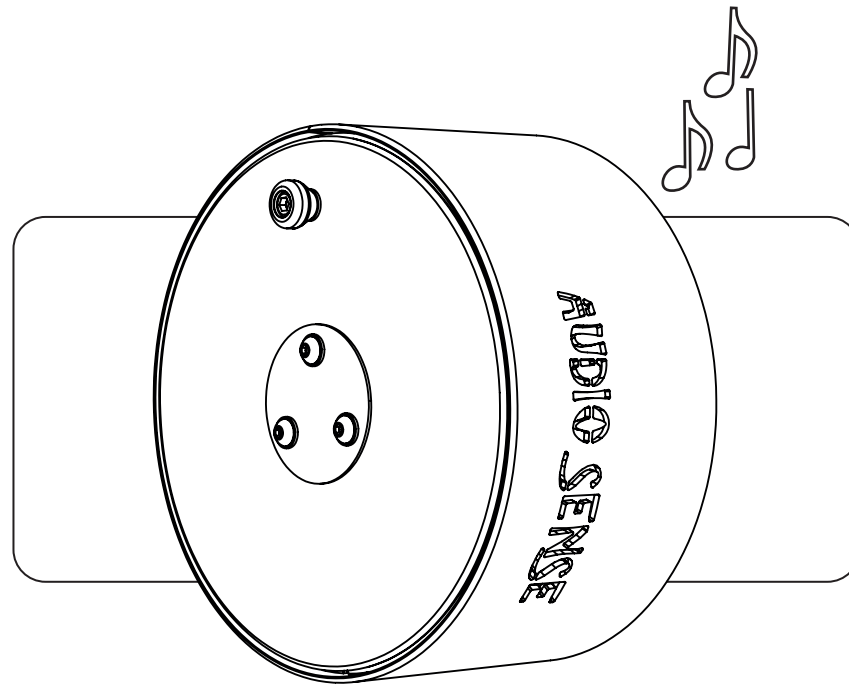

ASW90009_31082020




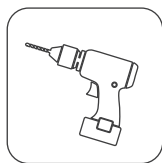

3 Install the Product

Overview Product



3

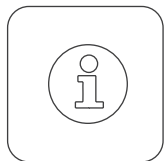

3 Check Interactive Elements

Control the Volume



4

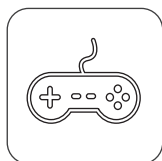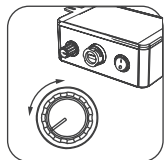

4 Play and Test

Change the Content

5

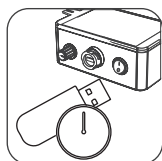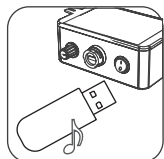


6 Install and Manage a Timelock

Maintenance and Fragrance Refill



7




Install the Product
 Install the product according to the Playnetic Installation Manual. During the installation, make sure that the potential users can not be exposed to hazards / dangerous situations. Check the stability of the product.

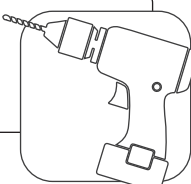


Number of Users
 Playnetic recommends you to use the product with a maximum of one user at a time.

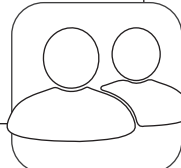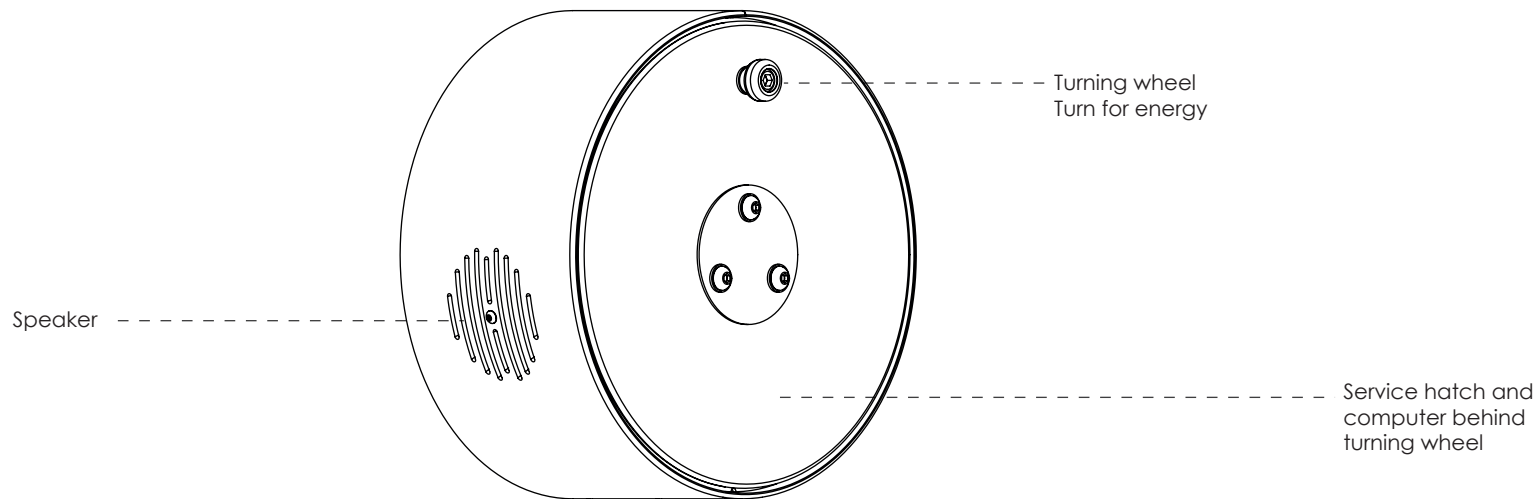Overview Product
 The overview above shows where all important parts can be found.



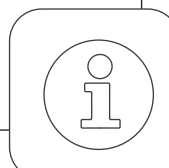


Check Interactive Elements
 Use the product and generate energy. If applicable, check that the interactive elements such as the music, lights, smell, electronic- and mechanical parts are working properly.





Control the Volume

1. Remove the bolts with the supplied hex key.
2. Remove the service hatch with the label.
3. Generate energy with the product.
4. Adjust the volume.
5. Close the service hatch.

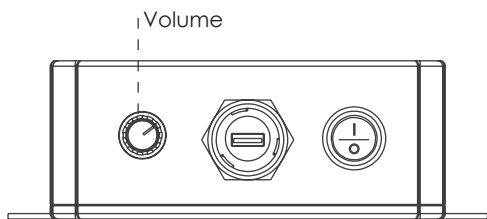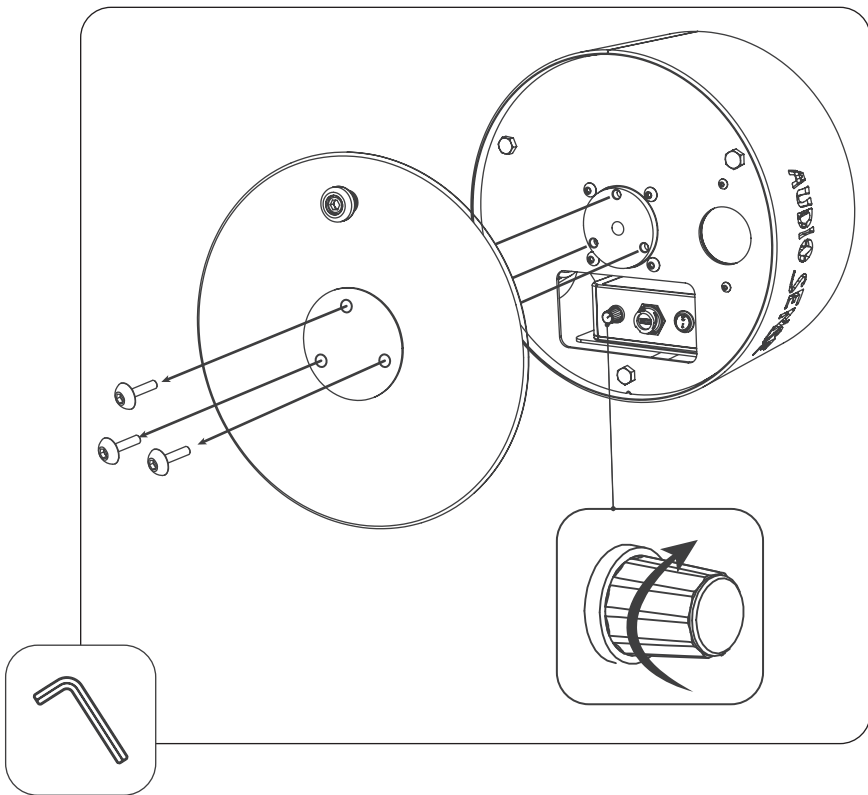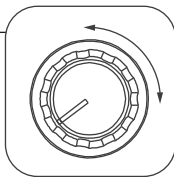


Play and Test

1. Spin the turning wheel to generate Human Powered Energy.
2. Test if the different audio fragments are played properly.
3. Test if you can smell the fragrance.

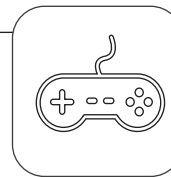

*Are the tests incorrect? Then try changing the content, check the cables / plugs or contact your local dealer.

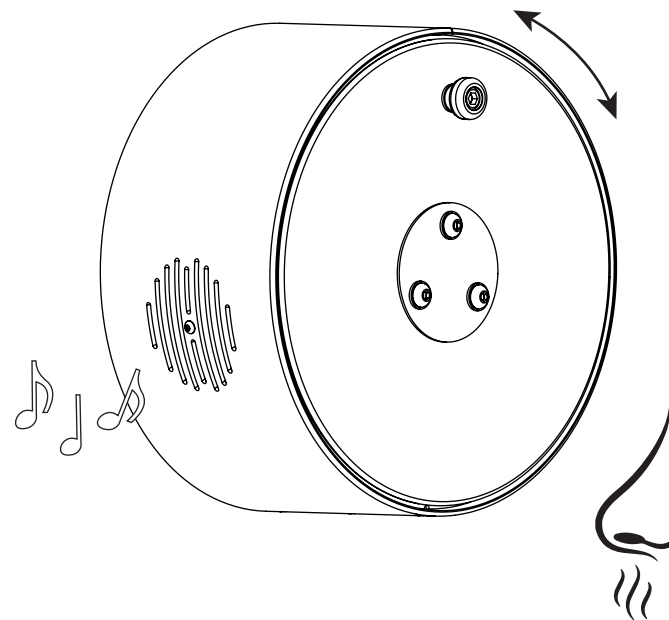


--- Read on --->



Change the Content

1. Use the supplied hex key and unscrew the 3 bolts.
2. Remove the turning wheel / service hatch.
3. Remove the USB stick from inside the AudioSense.
4. Insert the USB stick into a computer and place the new content / music on the USB stick. See the instruction on the right.
5. Insert the USB stick with the new content back into the AudioSense.
6. Generate energy with the AudioSense. You should now be able to hear your new content. If not, read the requirements on the right again.
7. Make sure that you put the dust cover back over the USB port.
8. Close the service hatch.


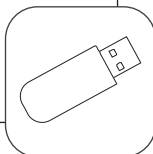


USB Stick Content Requirements

Get a USB stick (from inside the product).

Make sure that you meet the following requirements:

- a. Only use MP3-files.
- b. The name of the MP3 file needs to have at least 5 characters.
- c. The name of the MP3 file can't contain any strange characters.
- d. A single MP3 file can not be bigger than 2 MB.

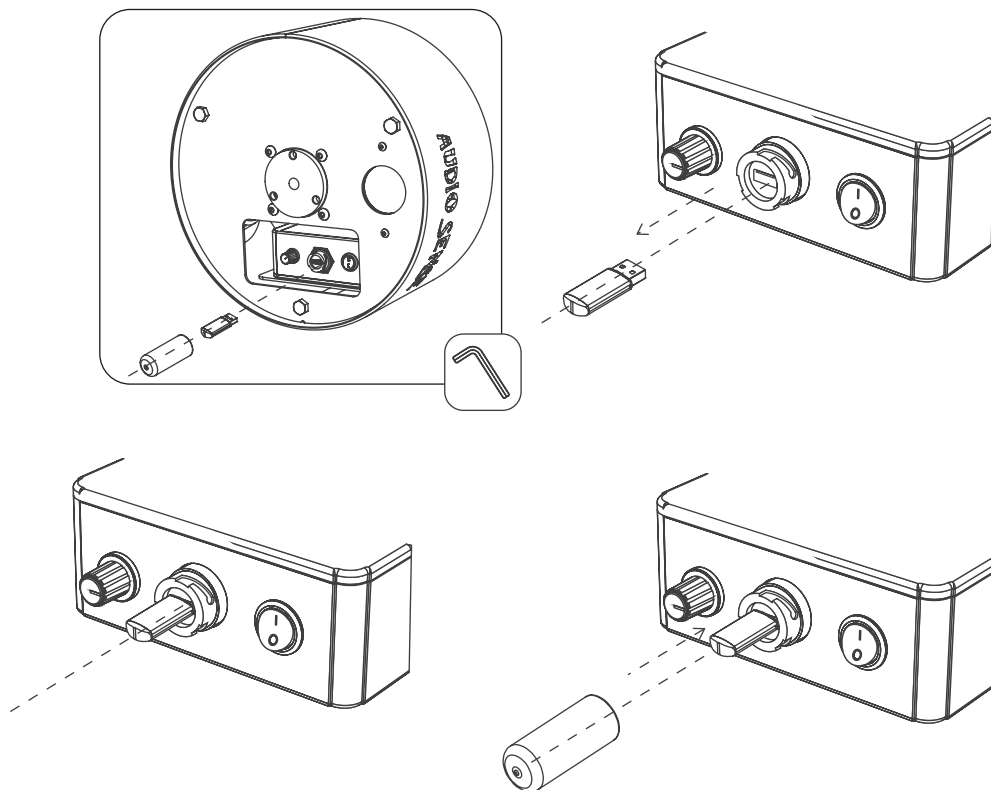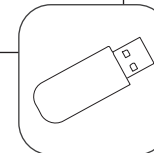

Sound_A

Geluid met MP3-indeling
1,46 MB



Sound_B

Geluid met MP3-indeling
1,79 MB



Sound_C

Geluid met MP3-indeling
1,18 MB




Sound_D

Geluid met MP3-indeling
1,18 MB



Sound_E

Geluid met MP3-indeling
1,18 MB

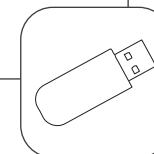




Receive Time Lock

1. Receive a USB device. Playnetic has set the correct start- and endtime for you.




Install and Manage a Time lock

1. Remove the bolts with the supplied hex key.
2. Remove the service hatch.
- 3. Important! The time lock must be installed at 12 o'clock local time. If the install is being done too late or too early, the time lock will not work properly.**
4. Put the USB stick into the computer.
5. Generate energy. Wait until the update is completed. Remove the USB stick after completion.
6. Make sure that you put the dust cover back over the USB port.
7. Close the service hatch.

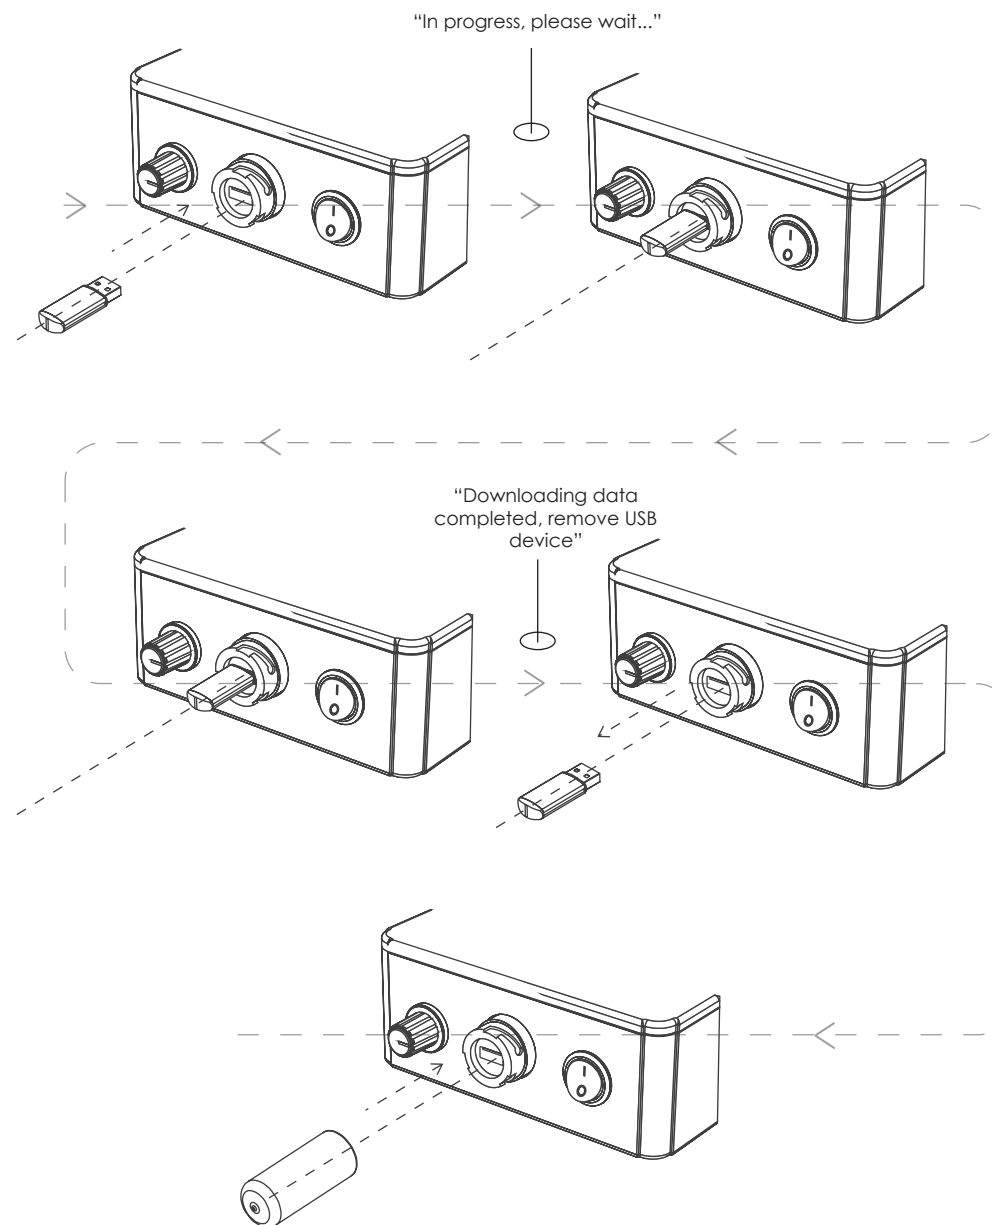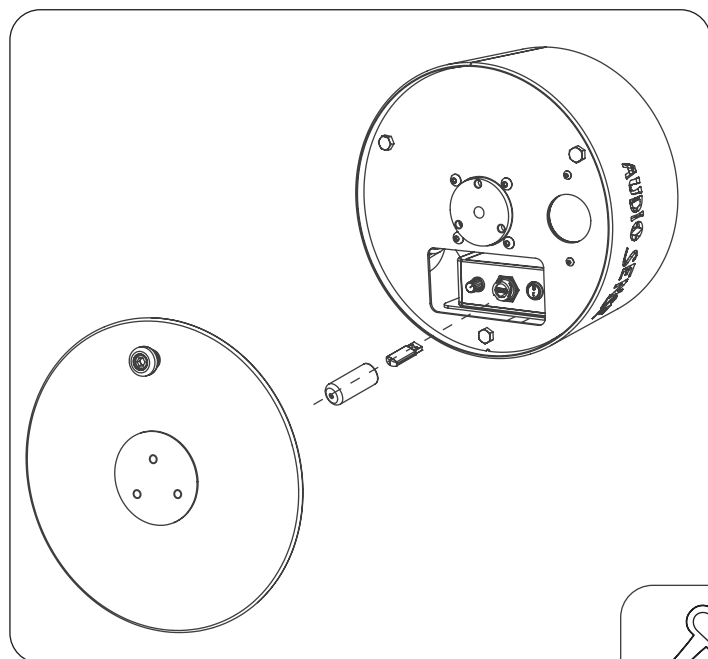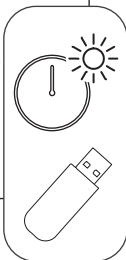

Fragrance Refill

1. Use the supplied hex key and unscrew the 3 bolts.
2. Remove the turning wheel / service hatch.
3. Remove the old fragrance bag.
4. Insert the new fragrance bag.
5. Put the turning wheel back on and close it with the bolts.

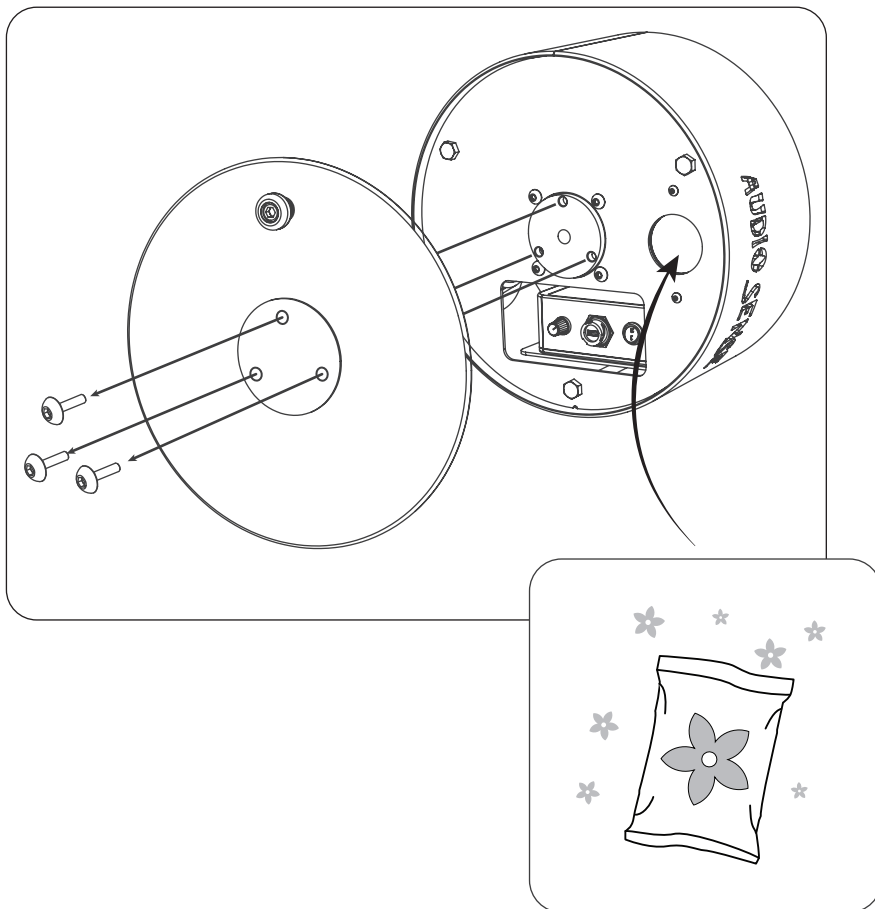**Maintenance**

The product must be maintained according to the Playnetic Maintenance Advice.

