


 Total package:
83 kilogram


 Center ball:
462 x 462 x 677 (mm)

 Side kick:
400 x 400 x 235 (mm)

AudioZone User Manual

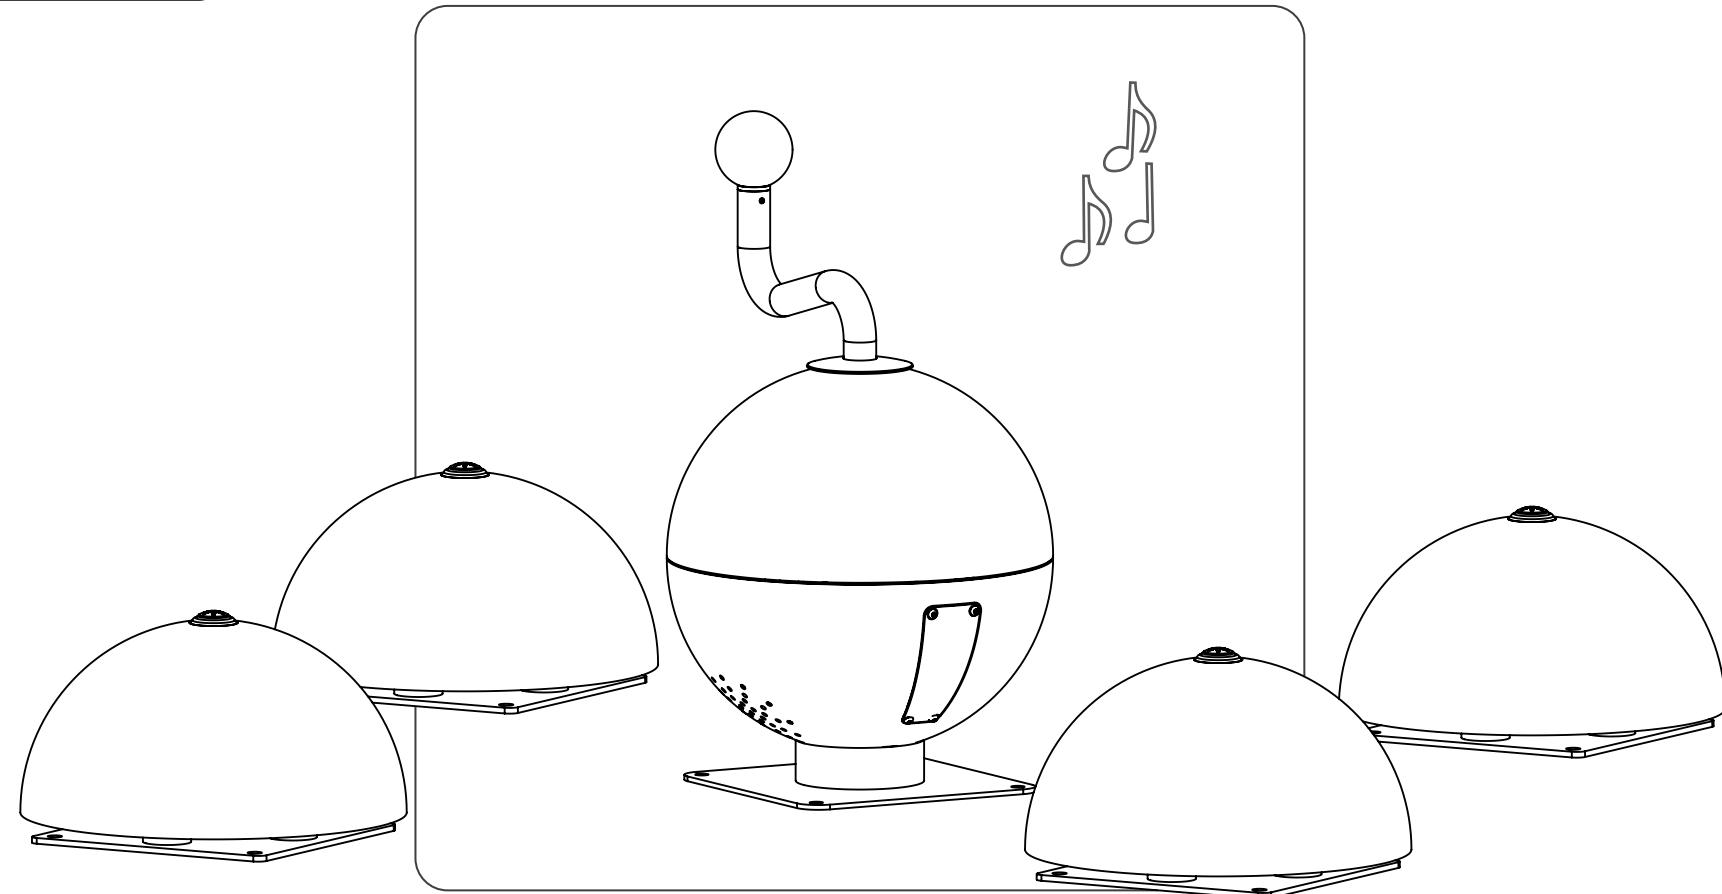


AZ90004_22062020

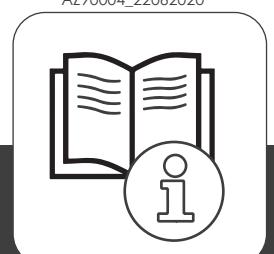





Install the Product

Install the product according to the Playnetic Installation Manual. During the installation, make sure that the potential users can not be exposed to hazards / dangerous situations. Check the stability of the product.

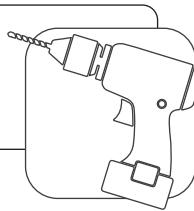


Number of Users

Playnetic recommends you to use the product with a maximum of four users.

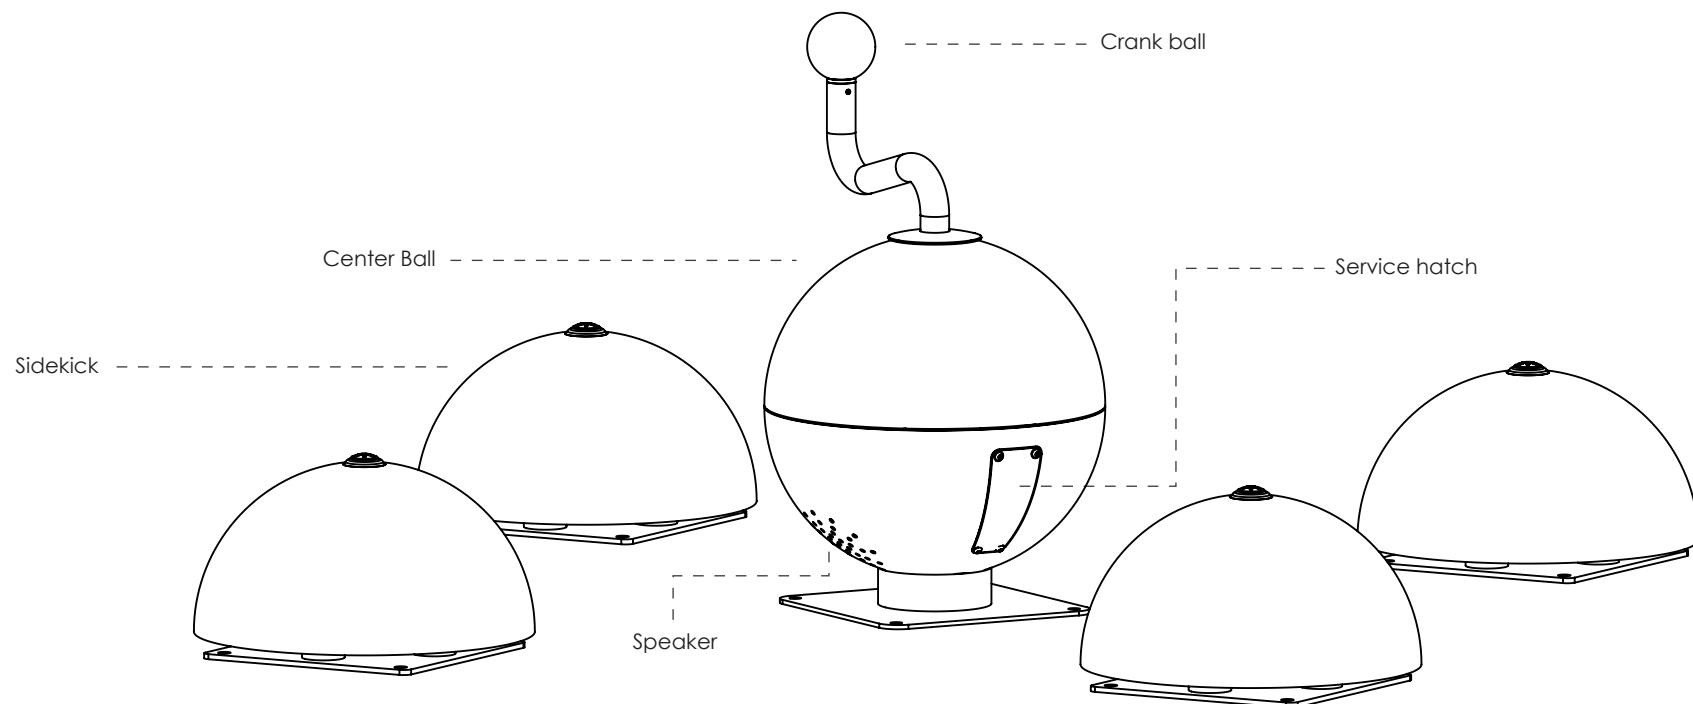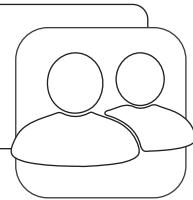

Overview Product

The overview above shows where all important parts can be found.

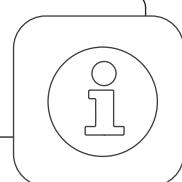




Check Interactive Elements

Use the product and generate energy. If applicable, check that the interactive elements such as the music, lights, smell, electronic- and mechanical parts are working properly.



Control the Volume

1. Remove the bolts with the supplied hex key.
2. Remove the service hatch with the label.
3. Generate energy with the product.
4. Adjust the volume.
5. Close the service hatch.

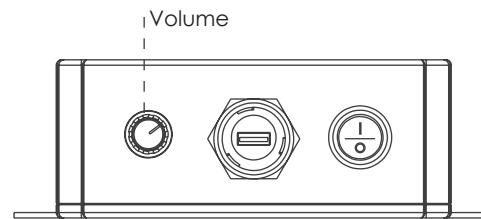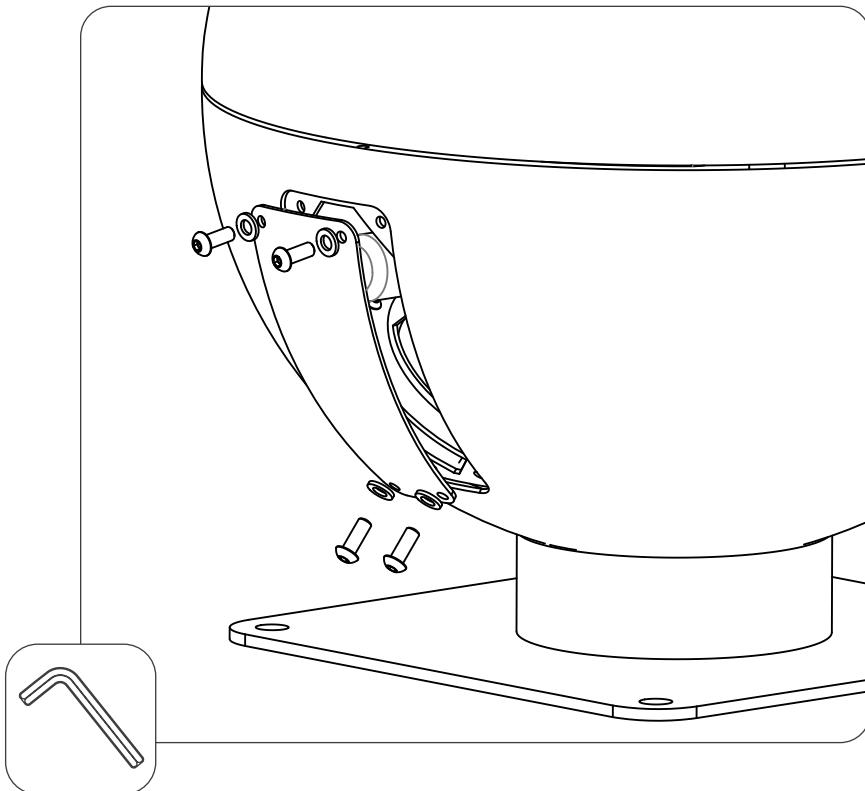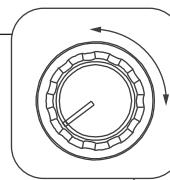**Play and Test**

1. Spin the handle to Generate energy with the product.
2. Test if the different audio fragments and games work properly.




*Are the tests incorrect? Then change the content. Follow the instructions in the Playnetic User Manual.

Play and Test

1. Memory: Memorize the light sequence which the AudioZone shows, now it's your turn to hit the correct sidekicks! The difficulty keeps increasing.
2. Lights out: Are you fast enough to hit all the sidekicks and turn off all the lights?
3. Dance Battle: Listen to the music, hit the sidekicks to make all kinds of sounds and dance!
3. Follow the Light: Try to follow the light and hit the sidekick, can you get the highscore?


*Are the tests incorrect? Then change the content. Follow the instructions in the Playnetic User Manual.

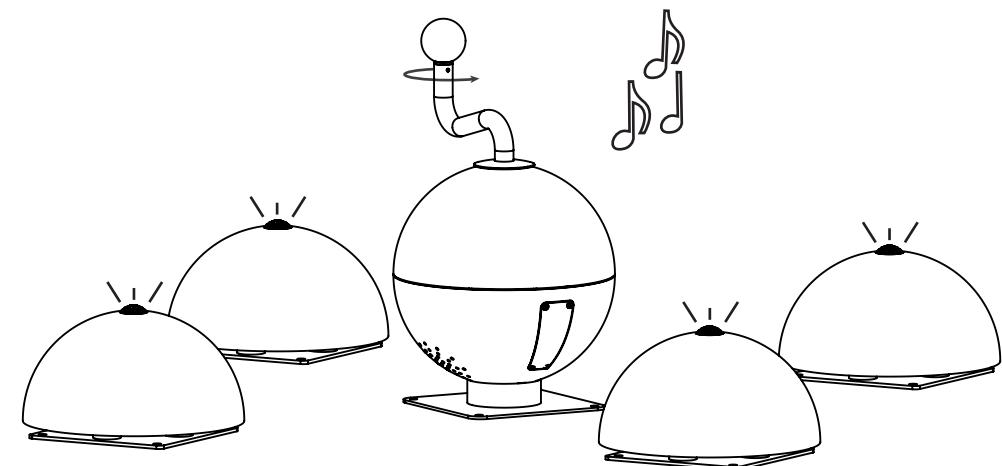

The 4 Games



1. Memory

Memorize the light sequence which the AudioZone shows, now it's your turn to hit the correct sidekicks! The difficulty keeps increasing.

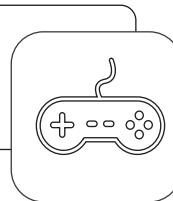


2. Lights Out

Are you fast enough to hit all the sidekicks and turn off all the lights? The light keeps changing color and the clock is ticking.

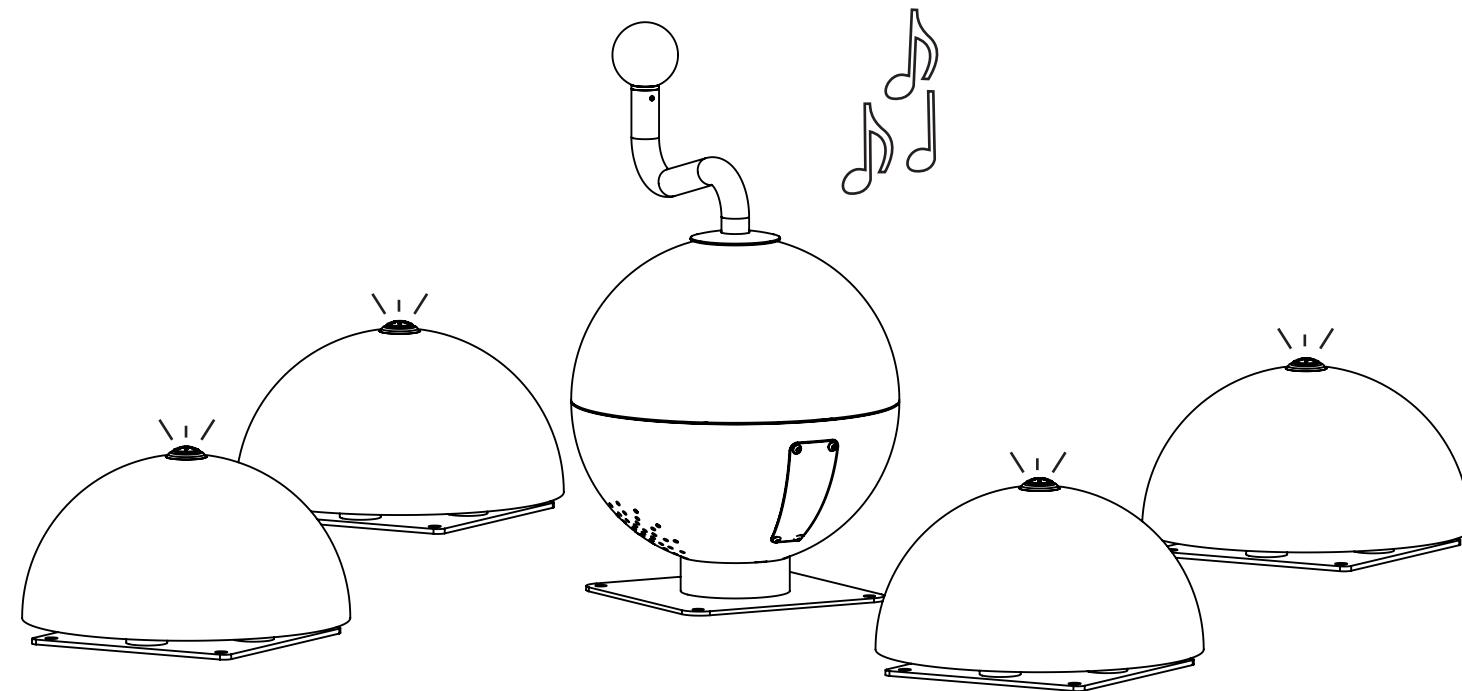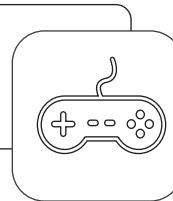


3. Dance Battle

Listen to the music, hit the sidekicks to make all kinds of sounds and dance! Each sidekick, and everytime you hit them the sound is different.

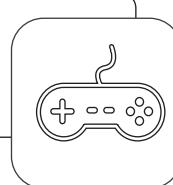

2. Follow the Light

The light keeps jumping from sidekick to sidekick, keep your eyes on the light and try to hit as many sidekicks as possible.

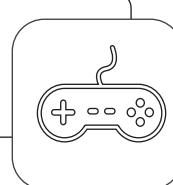



Receive TimeLock

1. Receive a USB device. Playnetic has set the correct start- and endtime for you.




Install and Manage a Timelock




1. Remove the bolts with the supplied hex key.
2. Remove the service hatch.
- 3. Important! The timelock must be installed at 12 o'clock local time. If the install is being done too late or too early, the time lock will not work properly.**
4. Put the USB stick into the computer.
5. Generate energy. Wait until the update is completed. Remove the USB stick after completion.
6. Make sure that you put the dust cover back over the USB port.
7. Close the service hatch.

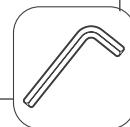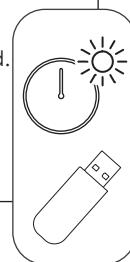

"In progress, please wait..."

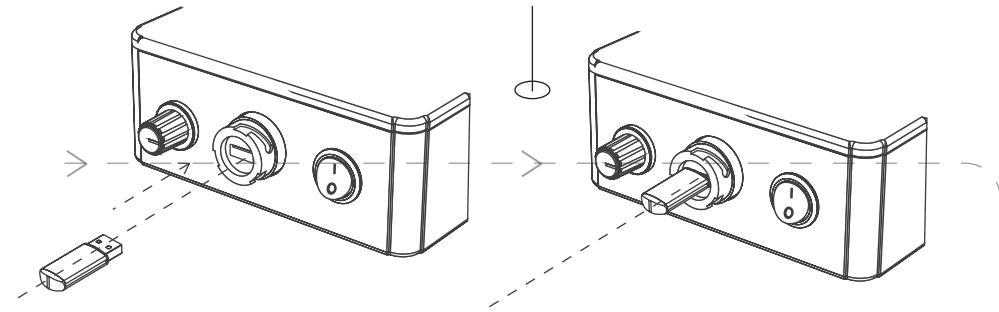

"Downloading data completed, remove USB device"

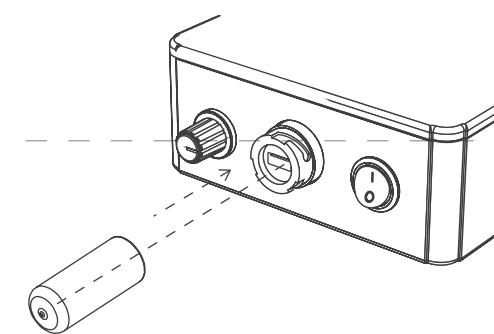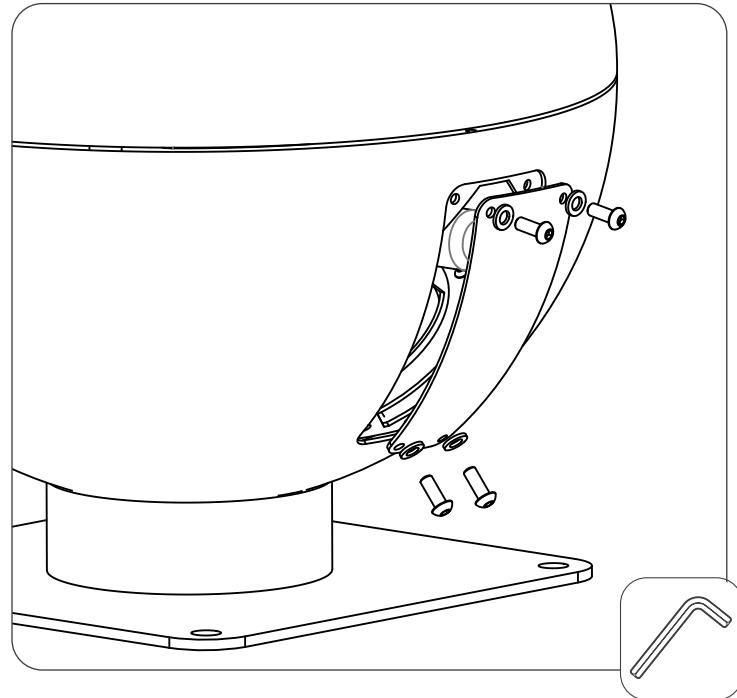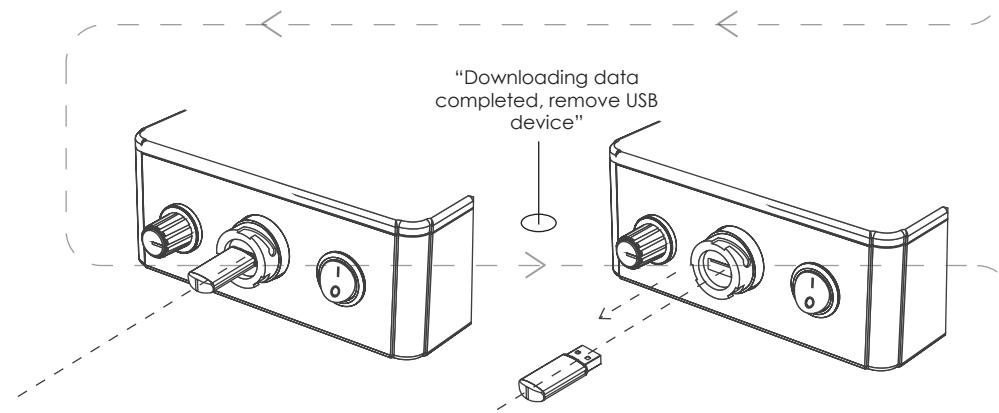

Maintenance

The product must be maintained according to the Playnetic Maintenance Advice.

