



ProtectoNetic User Manual



PN90137_14052020

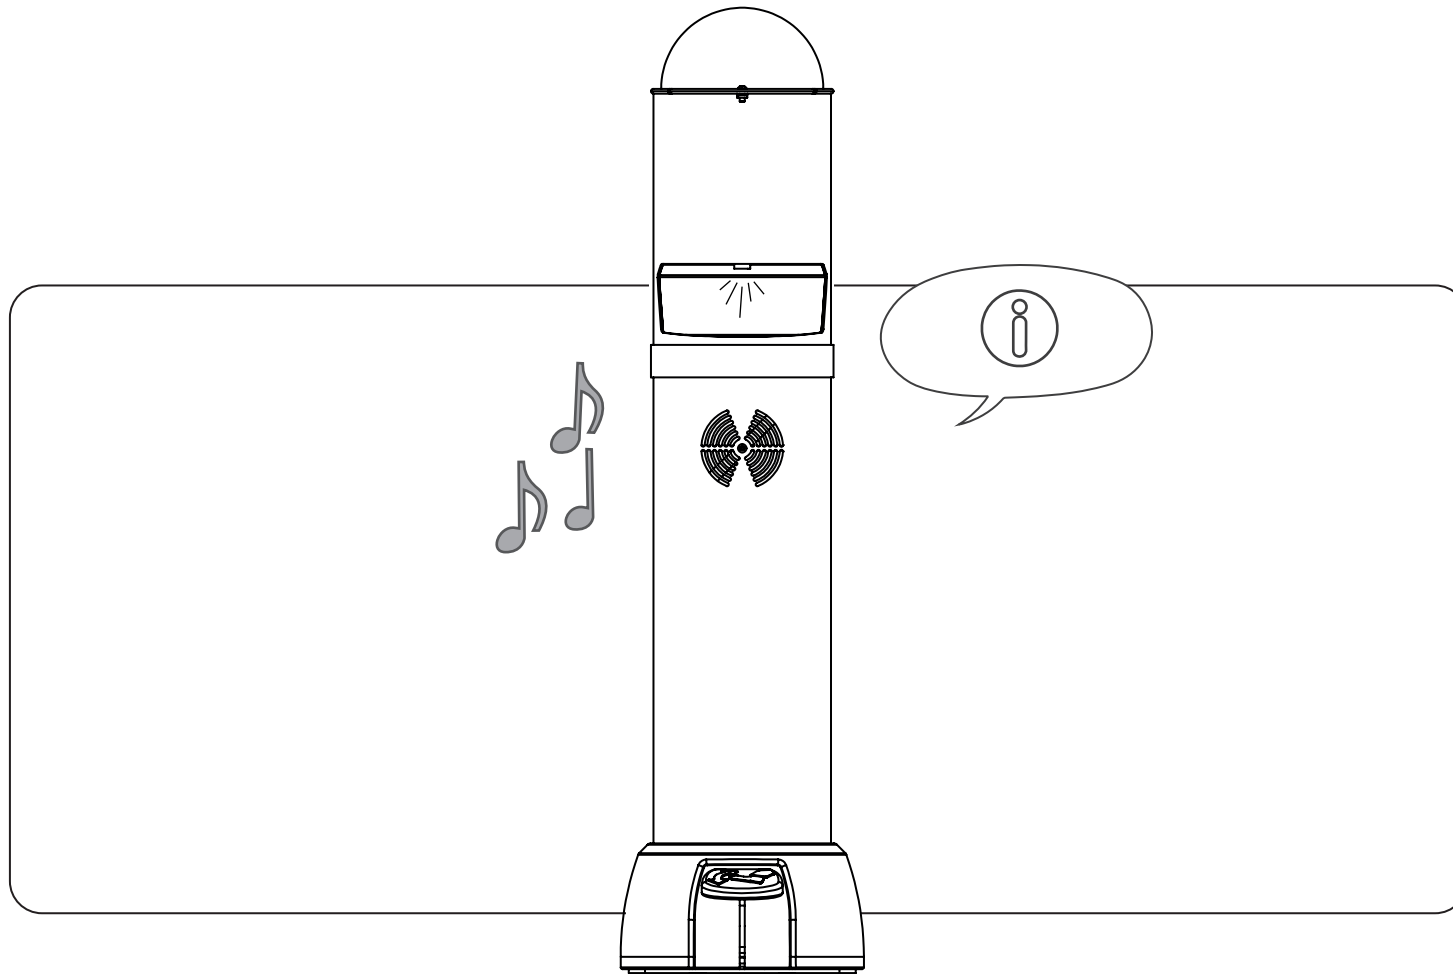


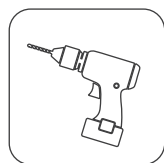

3 Install the Product

Overview Product



3

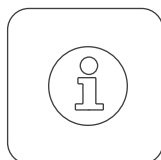

3 Check Interactive Elements

Control the Volume



4

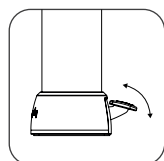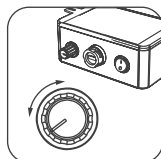

4 Play and Test

Change Content


5

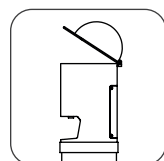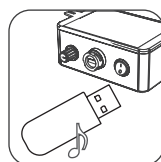

6 Refill and Clean


Install and Manage a Timelock

7

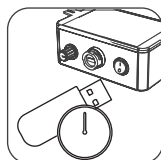


Maintenance

8

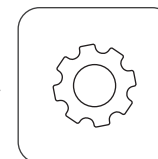


Install the Product

Install the product according to the Playnetic Installation Manual. During the installation, make sure that the potential users can not be exposed to hazards / dangerous situations. Check the stability of the product.

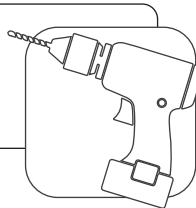
**Number of Users**

Playnetic recommends you to use the product with a maximum of two users.

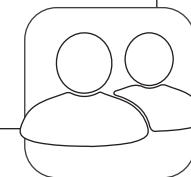

Cap
Open to access reservoir
and to clean


Speaker

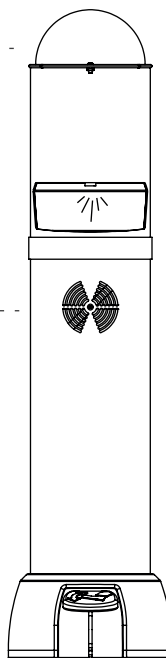

Service hatch

Disinfectant with sensor
Place hand in opening to
receive disinfectant

Foot pedal
to generate Human Powered
energy

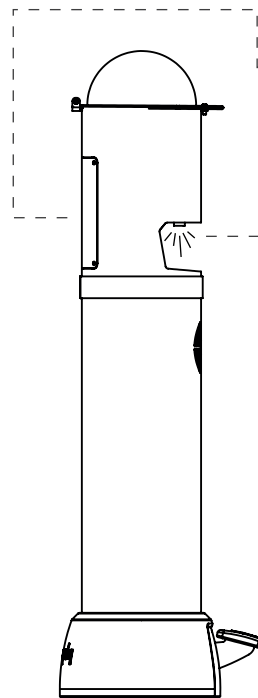**Overview Product**

The overview above shows where all important parts can be found.




**Check Interactive Elements**

Use the product and generate energy. If applicable, check that the interactive elements such as the music, lights, smell, electronic- and mechanical parts are working properly.



Control the Volume


1. Remove the bolts with the supplied hex key.
2. Remove the service hatch.
3. Generate energy with the product.
4. Adjust the volume.
5. Close the service hatch.

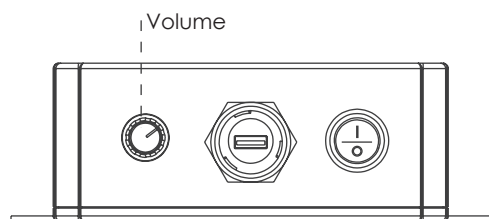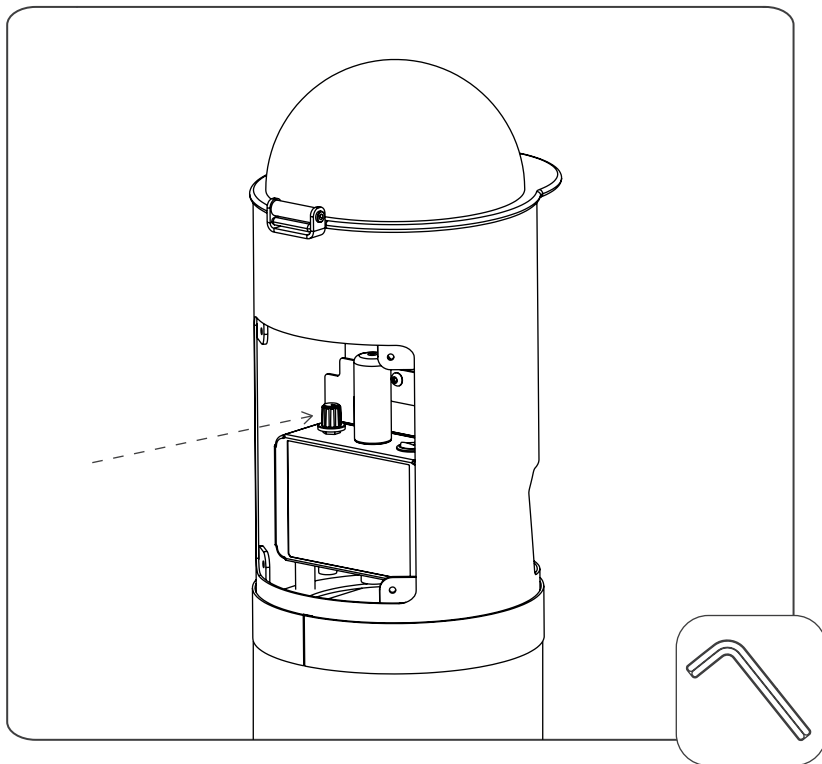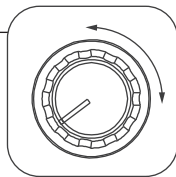

Play and Test






1. Generate energy with the product.
2. Test if the correct MP3 files are played.
3. Test if the disinfection pump works.

*Are the tests incorrect? Make sure you use .mp3 files, check all plugs. If it doesn't work, contact your dealer.

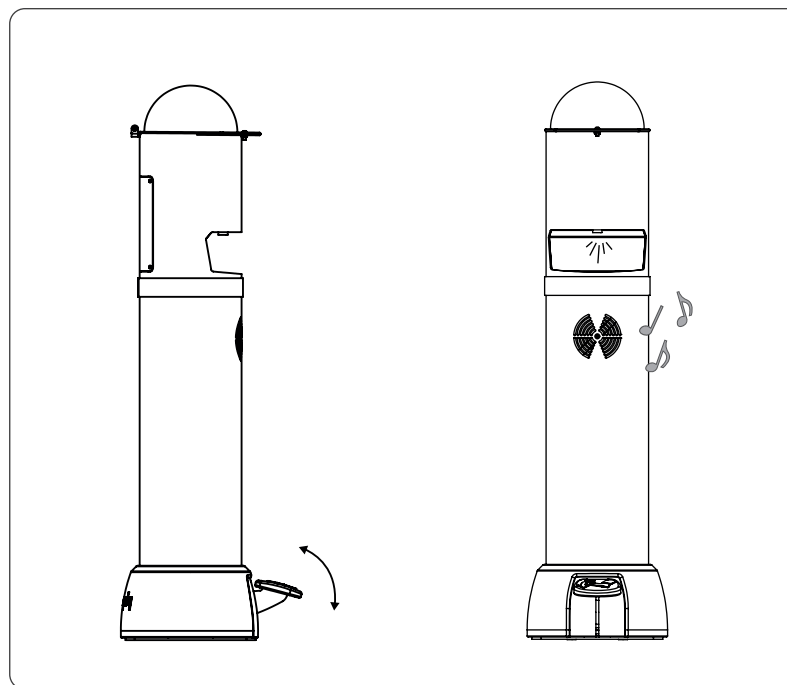

Change the Content


1. Use the supplied hex key and unscrew the service-hatch bolts.
2. Remove the service hatch.
3. Remove the USB stick from inside the ProtectoNetic.
4. Insert the USB stick into a computer and place the new content / music on the USB stick. See the instruction on the right.
5. Insert the USB stick with the new content back into the ProtectoNetic.
6. Generate energy with the ProtectoNetic. You should now be able to hear your new content. If not, read the requirements on the right again.
7. Make sure that you put the dust cover back over the USB port.
8. Close the service hatch and you are done.

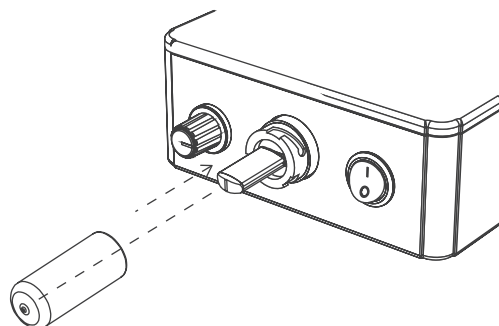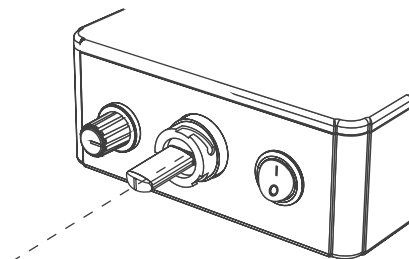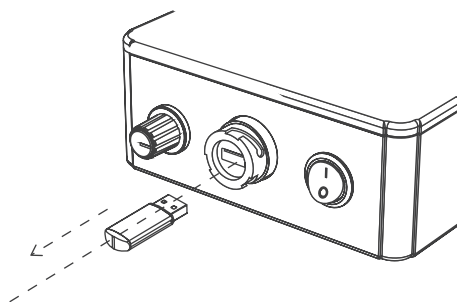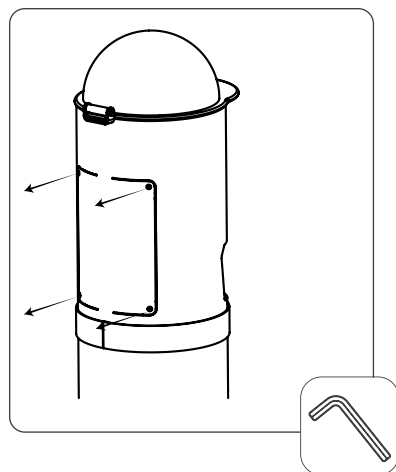

USB Stick Content Requirements

4. Get a USB stick (from inside the MusicBall).
- Make sure that you meet the following requirements:

- a. Only use MP3-files.
- b. The name of the MP3 file needs to have at least 5 characters.
- c. The name of the MP3 file can't contain any strange characters.
- d. A single MP3 file can not be bigger than 2 MB.



Sound_A

Geluid met MP3-indeling
1,46 MB



Sound_B

Geluid met MP3-indeling
1,79 MB



Sound_C

Geluid met MP3-indeling
1,18 MB



Sound_C



Geluid met MP3-indeling
1,18 MB



Sound_C

Geluid met MP3-indeling
1,18 MB

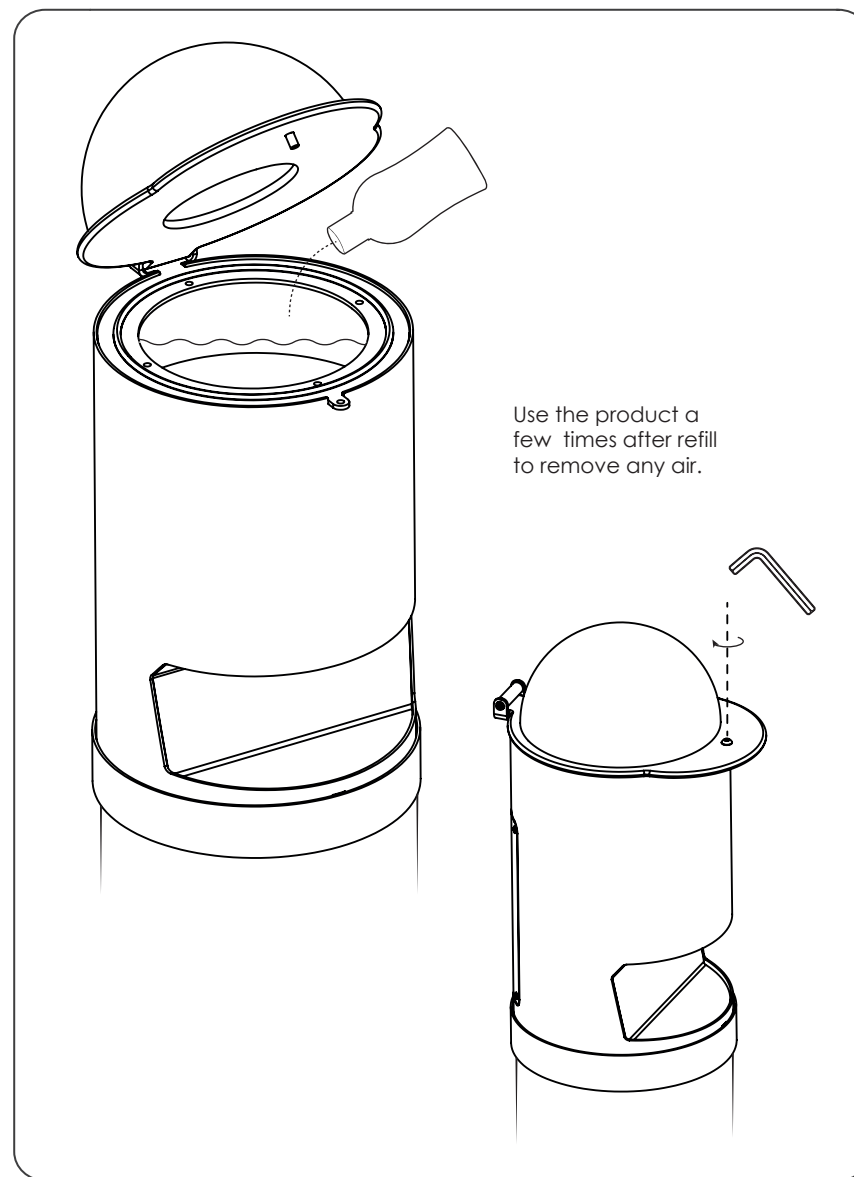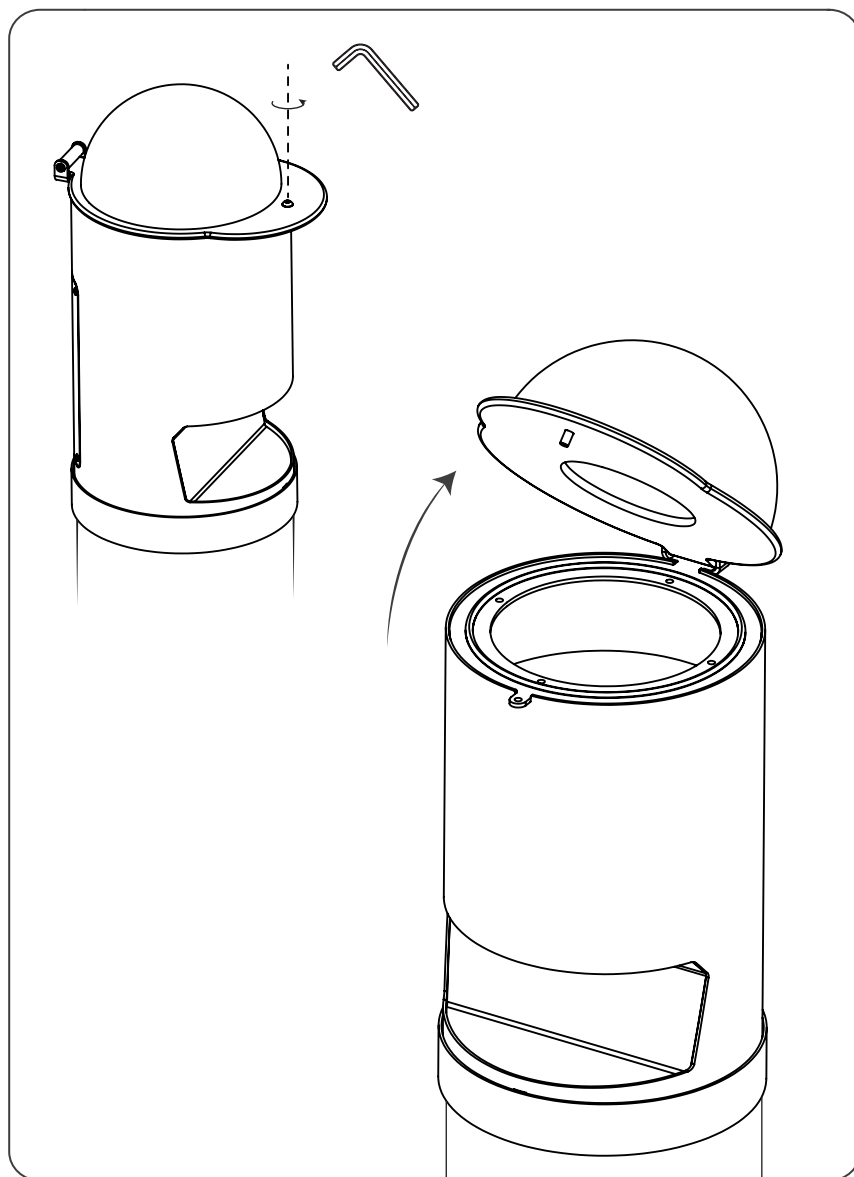

Refill and Clean


Receive Timelock

1. Receive a USB device. Playnetic has set the correct start- and endtime for you.





Install and Manage a Timelock

1. Remove the bolts with the supplied hex key.
2. Remove the service hatch.
3. Important! The timelock must be installed at **12 o'clock** local time. If the installation is being done too late or too early, the timelock will not work properly.
4. Put the USB stick into the computer.
5. Generate energy. Wait until the update is completed. Remove the USB stick after completion.
6. Make sure that you put the dust cover back over the USB port.
7. Close the service hatch.

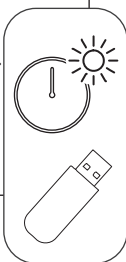

Update Your Timelock 2x a Year

For updating your timelock, use the USB device you received from Playnetic with the correct start- and endtime (same USB device for install option). Repeat step 1 till 7 in 'install a timelock' to complete the update.

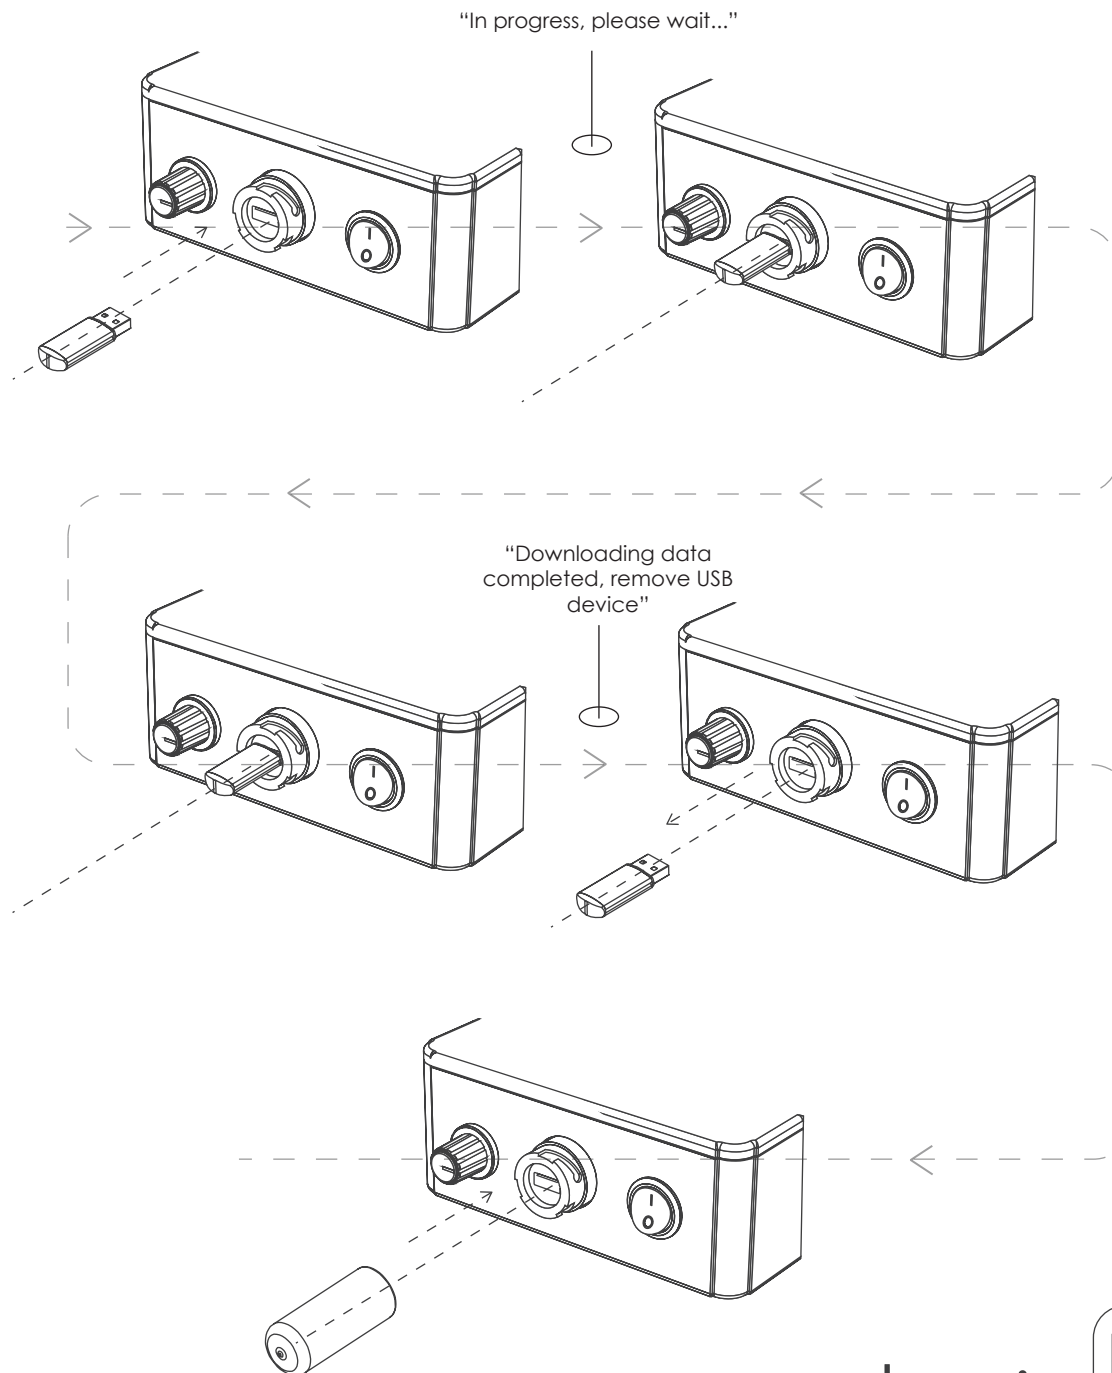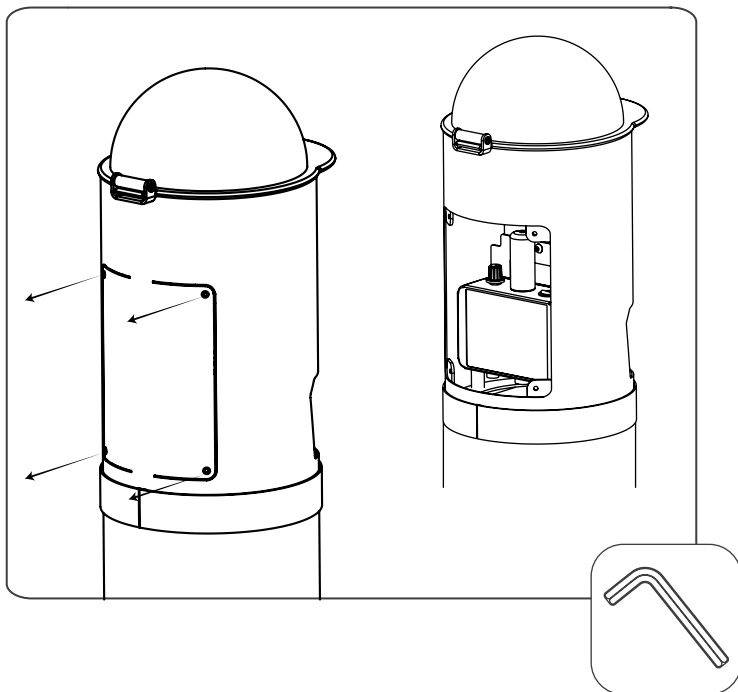

Maintenance

The product must be maintained according to the Playnetic Maintenance Advice.

